

808CAMERA Key Chain Micro-Camera

User Manual



Pin plug - This is used when the product requires a restore to factory settings.

Camera - Point this at the subject you are recording.

Indicator Light - This is to indicate the following

Charging - A yellow light will flash on and off, when charged the light will turn off. You will know the product needs charging again as the yellow light will flash on and off.

Off - The indicator should show no light

On - There will be a solid yellow light showing

Card Is full - Yellow light will stay on

Low battery Power - Yellow light will flash on and off slowly

On/Off button - Hold the button down for the camera to come on, you will know it is on as the yellow light will appear. To turn off press the same button again but hold down until the yellow light no longer appears.

Video/camera -

Camera - Press the on/off button down until the yellow light comes on, click the video/camera button once you should now be able to take a picture. Before taking out the SD card please hold down the on/off button.

Video - Press the On/Off button until the yellow light comes on, hold the video/camera button down until the yellow light flash's three times. Then it will go off and you can start recording, once you have recorded your subject press the video/camera button the yellow light will come on this means it has stopped and is saving.